


Acmeda Roller Blind

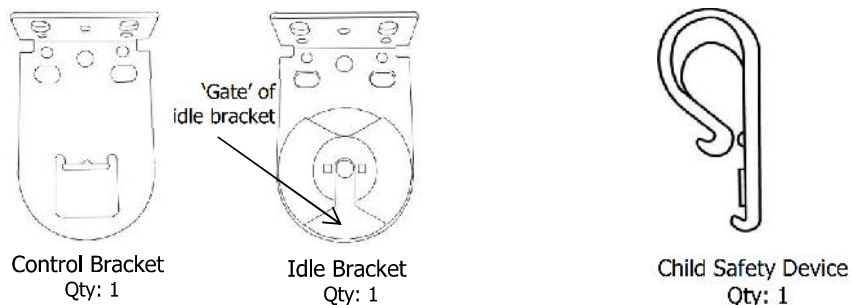


Important Notes

- Please check that all parts have been supplied before you begin to assemble your new Custom Roller Blind
- Do not unroll the blind until it is fully installed
- The finished blind width is from the outside of the left bracket to the outside of the right bracket
- Ensure that the blind is mounted level for correct operation

Installing Mounting Brackets

As per your order, determine the correct fitting location of mounting brackets and mark where you are going to install the brackets.

- Inside the window frame (Inside Mount) or;
- On the window frame or wall (Outside Mount)
- Place the Control Bracket (part B) in the desired location, as per your order i.e. on the LHS or RHS, if necessary pre drill 2 holes. After drilling the holes, secure the bracket with screws (part D)
- Repeat this process for the Idle Bracket (part C)

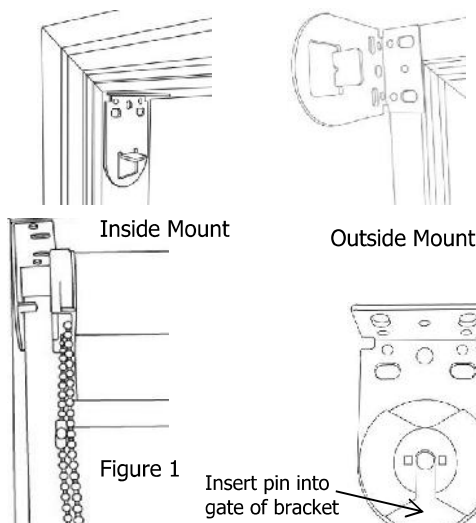

Attaching Blind to Brackets

- Insert the control mechanism into the control bracket (part B) so it is engaged (Figure 1)
- Carefully align the idle mechanism with the 'gate' of the idle bracket (part C) (Figure 2). Gently push the blind upwards into the idle bracket until it clicks into place

Note – The plastic insert on the idle bracket can be removed and rotated as required.

Operating Blind


Using the chain, draw the blind up and down several times to ensure the blind operates correctly.

Attaching Child Safety Device (For more safety information, please see over page)

Secure the child safety device (part E) to the wall beside the blind, ensuring the chain is not too tight, as this may restrict smooth operation.

Removing Blind

- Ensure the blind is fully rolled up
- Turn the clear plastic wheel in the idle end of the blind (this will only turn one way) until there is a click indicating the pin is fully retracted. You will now be able to remove the blind completely from the brackets. Release the pin so as not to damage the mechanism

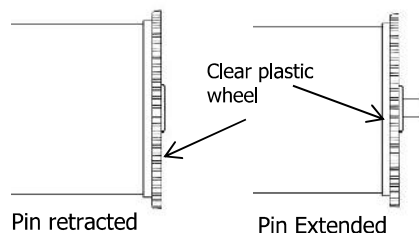

Installation Information

Acmeda Blind Safety Information

Child Safety Instructions

For Blinds With Chain Control

Warning

- The chain tension device must be fitted to ensure child safety
- The chain tension device is to be positioned at the bottom of the chain loop
- It can be fitted to the inside of the reveal (Frame) or in front of the reveal (Frame)



Fitting Instructions

1. Position the tension device at the bottom of the chain loop (Figure 1).
2. Install the tension device onto the reveal/frame, making sure that the loop chain hangs with minimal tension (Figure 2).

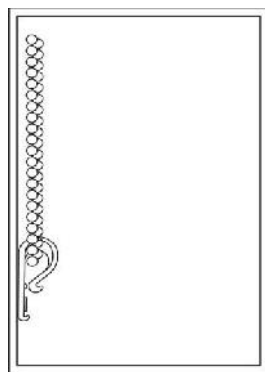


Figure 1

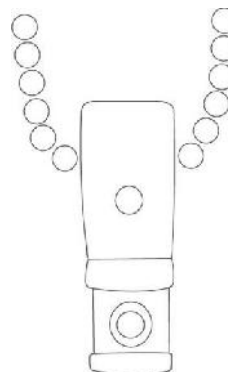


Figure 2



WARNING – ALL WINDOW COVERINGS WITH CORD OR CHAIN

To avoid creating a possible strangulation hazard for children, the corded or chained internal window covering must be installed in such a way that a loose cord or chain cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

- A cord/chain guide may be installed lower than 1600mm above floor level if the cord/chain is sufficiently secured or tensioned to prevent a loop 220mm or longer being formed
- If a cord/chain guide is installed lower than 1600mm above floor level, it must be designed to prevent a child from being able to remove the cord/chain
- If a cleat is used to secure the cord, it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat